

## Linen Tower Assembly Instructions

Thank you for purchasing a Stonewood Linen Tower. To reduce the chance of damage and to ease handling, the Linen Tower is shipped in three pieces: lower section, upper section and the crown molding. **NOTE:** Assemble the linen tower in the room where it will be installed.


### TO ASSEMBLE THE LINEN TOWER YOU WILL NEED

- Medium Phillips (star) screw driver
- Carpenters glue
- Paper towel or clean rag

### WE SUPPLY


- Screws
- Dowels

### STEP BY STEP INSTRUCTIONS

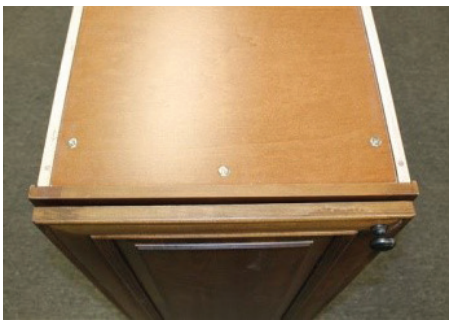

#### STEP 1

Place the upper section upside down with the top on the floor and remove/discard nail glide feet.

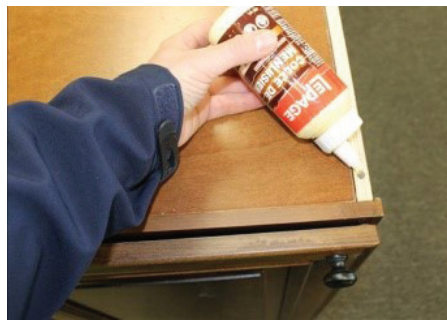

#### STEP 2

Place a few drops of glue in the four dowel holes.



#### STEP 3

Push the four dowels into the holes until they can go no further




#### STEP 4

Place a few drops of glue in the four dowel holes of the lower unit and place the upper unit on top of the lower unit, aligning the dowels and holes. **Wipe off any excess glue.**



#### STEP 5

Crown molding is installed using the provided screws. The crown molding has pre-drilled holes. Align the crown molding to the top of the cabinet and secure using screws. **If the Linen Tower is being installed next to a wall, you will need to cut back the crown molding. NOTE: this cut must be performed on site by a skilled trades professional.**

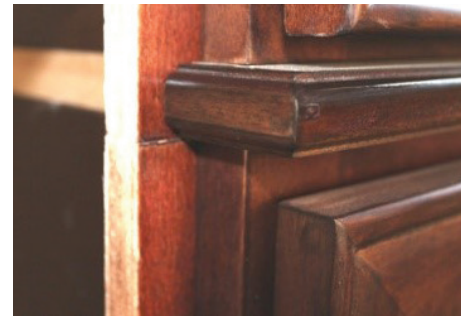

#### STEP 6

If you are installing the linen tower against a wall and you ordered a filler, it will be shipped in two pieces. The **shorter 33" piece should be installed on the bottom section** of the linen tower, making the seam less noticeable.

Distributor of:

**STONEWOOD**  
BATH CABINETS

*Yorkville*  
VANITIES

316 Bayview Dr., Barrie, ON L4N 8X9  
P: 705.719.4870 | F: 1.866.376.7154  
E: orders@rocksolidsupply.com

© 2018 Rock Solid Supply  
Revised 21/08/2018  
Page 1 of 1